



## Roof *Airtight on the inside*

### Mounting vapour control layer for above-rafter insulation



- **Apply Majrex** with the unprinted side facing towards you
- Overlap membranes by approx. 10 cm, fix in place with Twinet and additionally with a stapler if required




- Seal overlaps and penetrations airtightly using Wigluv 60
- Not suitable for makeshift coverage/ construction coverage



#### How it should look:

- Majrex for above-rafter insulation

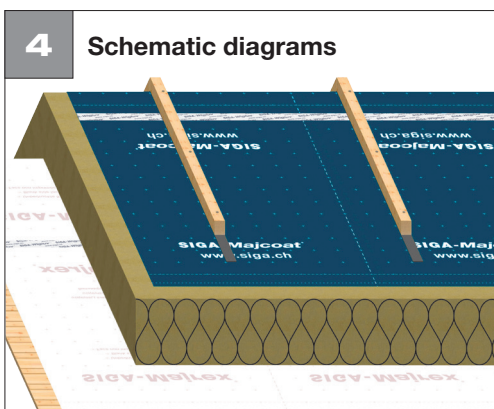




Above-rafter insulation with Majpell 5:  
 • Lay **Majpell 5** with the smooth side and the writing facing you



**NEW**

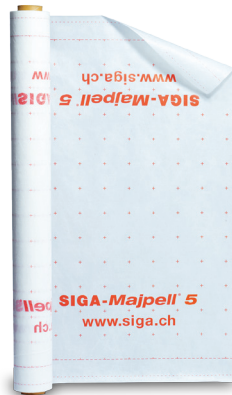

**Majrex®** P. 108

**Majpell® 5** P. 109

**Wigluv® 60** P. 120