




## Windtight and rainproof on the outside

### Roof underlay membrane overlap

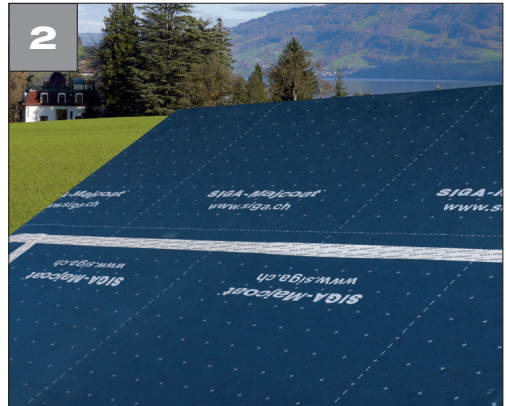


- Align Wigluv centrally along the overlap and secure in place
- Bond without tension and creases and press on firmly
- The printed bonding aid saves time

#### How it should look:

- The overlap is permanently windtightly sealed with Wigluv 60

### Tips and tricks

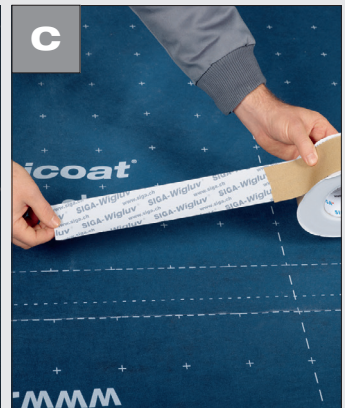


- Release Wigluv from its backing paper
- Unroll a turn of Wigluv so that the backing strip is at the top
- **Advantage:** backing strip separates automatically on unrolling



## Roof

### Windtight and rainproof on the outside

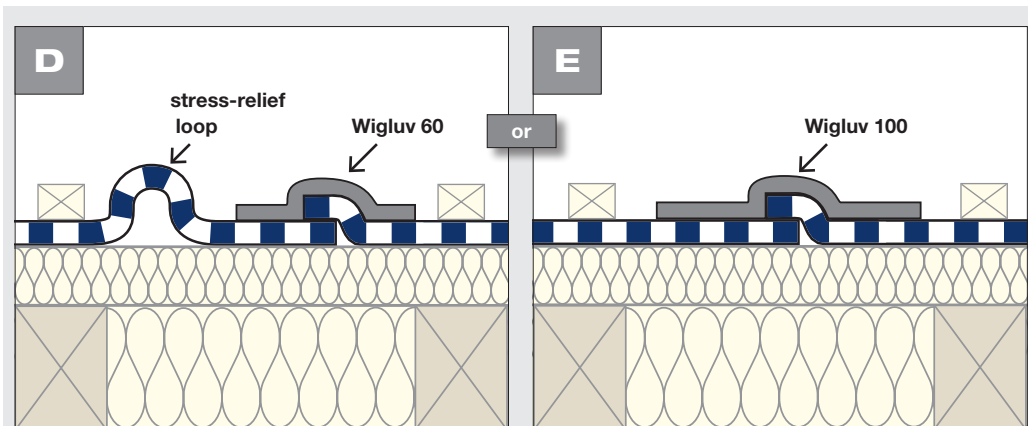

- Membranes show different expansion and shrinkage characteristics
- **Make a stress-relief loop in the membrane** or seal overlaps with **Wigluv 100** if:
  - the counter battens do not rest on the solid underlay with their complete surface or
  - the membrane is laid vertically



**Wigluv® 60**

P. 120



**Wigluv® 100**

P. 122