


## Wall: Timber construction

### *Airtight on the inside*

#### Vapour control layer overlaps

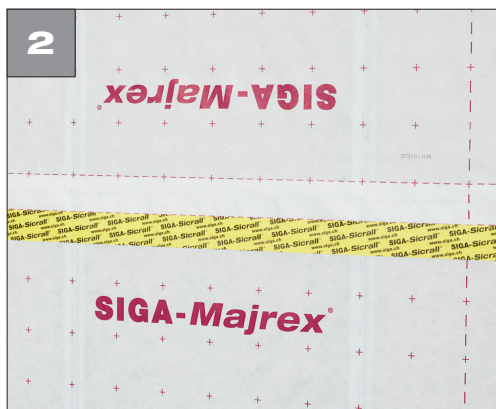

- Release the Sicral backing strip
- Position Sicral in the centre of the overlap and secure it in place
- Remove backing strip
- Apply Sicral free of tension and creases and press it down vigorously by hand

#### How it should look:

- The overlap is sealed with Sicral 60 and permanently airtight

#### Butt-joint



- Apply Sicral along the centre of the joint
- Press it on with a hard rubber roller
- Improves the immediate adhesion



**Sicral® 60**

P. 110